

MAINTENANCE MANUAL

YAMADA AIR-OPERATED DIAPHRAGM PUMPS

NDP-40

NDP-50

NDP-80



EC DECLARATION OF CONFORMITY

Name of company : YAMADA EUROPE B.V.

Address : Aquamarijnstraat 50, 7554 NS Hengelo (O), The Netherlands

declares, in sole responsibility, that the following product

Equipment : Air operated diaphragm pump series NDP, DP, BDP, CDP, CDPT, EDP..., .

Type : Specified on page 2 and 3

Serial number : All

Referred to in this declaration are compliant with **ATEX 95** regulations and may be used in potentially explosive atmospheres. - Directive 94/9/EC.

Compliance with the essential health and safety requirements has been assured by conformation with the following standard(s) or directive(s)

- European Standard EN 13463-1:2001
- European Standard EN 809/ October 1998
- Directive 98/37/EC

The marking of the equipment includes the following;



II 2 GD IIB/IIC 95°C

YAMADA EUROPE B.V. will keep on file for review the technical file YE ATEX0580V01X.

The Assessment is registered at the notified body KEMA, Arnhem



Place and date of issue: Hengelo, June 20, 2003

Name and signature as well as position of undersigned:

Danny Gordon Kyte (Managing Director)



EC DECLARATION OF CONFORMITY



date June 20, 2003
Rev April 27 2006

Series :	Model code:	Description:
NDP-05	NDP-05-FAT (EDP0-05 models)	AODD Pump 1/4" ALU/PTFE
	NDP-05-FDT	AODD Pump 1/4" CONDUCTIVE ACETAL/PTFE
	NDP-05-FST	AODD Pump 1/4" SUS/PTFE
	NDP-05-FVT	AODD Pump 1/4" PVDF/PTFE
DP-10	DP-10-BAN/C/E/H/S/T	AODD Pump 3/8" ALU/NBR/CR/EPDM/ TPE/TPO/PTFE
	DP-10-BSN/C/E/H/S/T	AODD Pump 3/8" SUS/NBR/CR/EPDM/ TPE/TPO/PTFE
	BDP-10-BAN/C/E/H/S/T	Barrel AODD Pump 3/8" ALU/NBR/CR/EPDM/ TPE/TPO/ PTFE
	BDP-10-BSN/C/E/H/S/T	Barrel AODD Pump 3/8" SUS/NBR/CR/EPDM/ TPE/TPO/ PTFE
DP-12	DP-12-BAN/C/E/H/S/T	AODD Pump 1/2" ALU/NBR/CR/EPDM/ TPE/TPO/PTFE
	DP-12-BSN/C/E/H/S/T	AODD Pump 1/2" SUS/NBR/CR/EPDM/ TPE/TPO/PTFE
	BDP-12-BAN/C/E/H/S/T	Barrel AODD Pump 1/2" ALU/NBR/CR/EPDM/ TPE/TPO/ PTFE
	BDP-12-BSN/C/E/H/S/T	Barrel AODD Pump 1/2" SUS/NBR/CR/EPDM/ TPE/TPO/ PTFE
NDP-15	NDP-15-BAN/C/E/H/S/T	AODD Pump 1/2" ALU/NBR/CR/EPDM/ TPE/TPO/PTFE
	NDP-15-BSN/C/E/H/S/T	AODD Pump 1/2" SUS/NBR/CR/EPDM/ TPE/TPO/PTFE
	NDP-15-FDT	AODD Pump 1/2" CONDUCTIVE ACETAL/PTFE
	NDP-15-FVN/C/E/H/S/T	AODD Pump 1/2" PVDF/NBR/CR/EPDM/ TPE/TPO/PTFE
NDP- 20	NDP-20-BAN/C/E/H/S/V/T/TU/TU/TK1~2/GO(E) EDP0-20, -BA . E AND BA.B models	AODD Pump 3/4" ALU/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/F&K OEM version/GORE ONE-UP
	NDP-20-BSN/C/E/H/S/V/T/TU/TU/TK1~2/GO(E) EDP0-20, -BS.E, BS.B and CDP(T)-20 BS.	AODD Pump 3/4" SUS/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/F&K OEM version/GORE ONE-UP
	BDP-20-BAN/C/E/H/S/V/T/TU/GO(E)	Barrel AODD Pump 3/4" ALU/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/GORE ONE-UP
	BDP-20-BSN/C/E/H/S/V/T/TU/GO(E) BCDP-20-BS	Barrel AODD Pump 3/4" SUS/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/GORE ONE-UP
NDP-22	NDP-22-BAN/BAT/BATU	Barrel AODD Pump 1" ALU/NBR/PTFE.PTFE BONDED TYPE
NDP-25	NDP-25-BAN/C/E/H/S/V/T/TU/TU/TK1~2/GO(E) EDP0-25, -BA .E, BS.B and CDP(T)-25-BS	AODD Pump 1" SUS/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/F&K OEM version/ GORE ONE-UP
	NDP-25-BSN/C/E/H/S/V/T/TU/TU/TK1~2/GO(E) EDP0-25, -BS.E AND BS.B models	AODD Pump 1 SUS/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/F&K OEM version/ GORE ONE-UP
	NDP-25-BFN/C/E/H/S/V/T/TU/GO(E) EDP0-25 and -BF . E models	AODD Pump 1" Ferro/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/GORE ONE-UP
	NDP-25-BVN/C/E/H/S/V/T/TU/GO(E)	AODD Pump 1 "PVDF/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/GORE ONE-UP
	BDP-25-BAN/C/E/H/S/V/T/TU/GO(E)	Barrel AODD Pump 1" ALU/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/GORE ONE-UP
	BDP-25-BSN/C/E/H/S/V/T/TU/GO(E) BCDP-25-BS	Barrel AODD Pump 1" SUS/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/Bonded type/GORE ONE-UP
NDP-40	NDP-40-BAN/C/E/H/S/V/T/TK1/GO(E)	AODD Pump 1 1/2" ALU/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/F&K OEM version/GORE ONE-UP
	NDP-40-BSN/C/E/H/S/V/T/TK1/GO(E)	AODD Pump 1 1/2" SUS/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/F&K OEM version/GORE ONE-UP
	NDP-40-BFN/C/E/H/S/V/T/GO(E)	AODD Pump 1 1/2" Ferro/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/GORE ONE-UP
	NDP-40-BVN/C/E/H/S/V/T/GO(E)	AODD Pump 1 1/2 "PVDF/NBR/CR/EPDM/ TPE/TPO/FKM/PTFE/GORE ONE-UP

Series :	Model code:	Description:
NDP-50	NDP-50-BAEA/HA/TA	AODD Pump 2" ALU/EPDM-cond/TPE-cond PTFE(TPEE backup)
	NDP-50-BSEA/HA/TA	AODD Pump 2" SUS/EPDM-cond/TPE-cond PTFE(TPEE backup)
	NDP-50-BFEA/HA/TA	AODD Pump 2" Ferro/EPDM-cond/TPE-cond PTFE(TPEE backup)
	NDP-50-BVEAHA/TA	AODD Pump 2" PVDF/EPDM-cond/TPE-cond PTFE(TPEE backup)
	NDP-50-BAHG(O)(E)/BATG(O)(E)	AODD Pump 2" ALU/GORE ONE-UP
	NDP-50-BSHGO(E)/BSTG(O)(E)	AODD Pump 2" SUS/GORE ONE-UP
	NDP-50-BFHG(O)(E)/BFTG(O)(E)	AODD Pump 2" Ferro/GORE ONE-UP
	NDP-50-BVHG(O)(E)/BVTG(O)(E)	AODD Pump 2" PVDF/GORE ONE-UP
	NDP-50-BAEAP(Y)(B)	AODD Pump 2" ALU / EPDM-cond. Powder pump
NDP-80	NDP-80-BAEA/HA/TA	AODD Pump 3" ALU/EPDM-cond/TPE-cond PTFE(TPEE backup)
	NDP-80-BSEA/HA/TA	AODD Pump 3" SUS/EPDM-cond/TPE-cond PTFE(TPEE backup)
	NDP-80-BFEA/HA/TA	AODD Pump 3" Ferro/EPDM-cond/TPE-cond PTFE(TPEE backup)
	NDP-80-BAHG(O)(E)/BATG(O)(E)	AODD Pump 3" ALU/GORE ONE-UP
	NDP-80-BSHG(O)(E)/BSTG(O)(E)	AODD Pump 3" SUS/GORE ONE-UP
	NDP-80-BFHG(O)(E)/BFTG(O)(E)	AODD Pump 3" Ferro/GORE ONE-UP
	NDP-80-BAEAP(Y)(B)	AODD Pump 3" ALU / EPDM-cond. Powder pump

Adaptations to pumps where above mentioned models are the technical basis, are also ATEX certificated.
Therefore adaptations to standard above mentioned pump models may be executed by Yamada Europe within the ATEX declaration

Pumps models of Yamada Europe private labels brands which have above models as basis are declared as to be ATEX certificated.

Also adaptations to standard pumps of private label brands with above mentioned Yamada pumps models as basis may also be executed by Yamada Europe within the ATEX declaration.

WARNING



- For your own safety, be sure to read these procedures carefully before performing maintenance on this product. After reading this document, be sure to keep it handy for future reference.

This maintenance manual covers what you should know about maintenance of the Yamada NDP-40 series, NDP-50 series and NDP-80 series Diaphragm Pumps.

This edition is based on the standards for the March 2011 production run. Remember, the specifications are always subject to change; therefore, some of the information in this edition may not apply to new specifications.

Warnings and Cautions

For safe use of this product, be sure to note the following: In this document, warnings and cautions are indicated by symbols. These symbols are for those who will operate this product and for those who will be nearby, for safe operation and for prevention of personal injury and property damage. The following warning and caution symbols have the meanings described below. Be sure to remember their meanings.



WARNING : If you ignore the warning described and operate the product in an improper manner, there is danger of serious bodily or property damage.



CAUTION : If you ignore the caution described and operate the product in an Improper manner, there is danger of personal injury or property damage.

Furthermore, to indicate the type of danger and damage, the following symbols are also used along with those mentioned above:



This symbol indicates a DON'T, and will be accompanied by an explanation on something you must not do.



This symbol indicates a DO, and will be accompanied by instructions on something you must do in a certain situation.

WARNING



- Before starting maintenance work, cut off the feed air and clean the pump. If air pressure or residue remain in the pump, there is danger of explosion, or possible poisoning resulting in serious injury or death if chemicals adhere to the skin or are accidentally swallowed. (For details on cleaning the pump, refer to Chapter 6 of the operating manual.)
- When replacing parts, be sure to use the recommended genuine parts or Equivalents. Use of other parts may cause a malfunction of the product. (Refer to Exploded View and Reminder to order correct item on the separate sheets.)

CAUTION



- When it is instructed that special tools must be used, be sure to use the specified tools. Otherwise, the pump may be damaged.
- Refer to 10.1 "Specifications" in the Operating Manual. Also, remember that the pump is heavy, and extreme care must be taken when lifting it.

Table of Contents

•Warnings and Cautions

•Table of Contents


1. Principles of operation	1
2. Tools, etc.	
2.1 General tools	1
2.2 Special tools	1
2.3 Misc.	1
3. Ordering Replacement parts	1
4. Balls and Valve seats	
4.1 Removal	
■ BA□, BS□, BF□ types	2
■ NDP-40 BP□ • BV□ types	3
■ NDP-50 BP□ • BV□, NDP-80 BP□ types	4
4.2 Inspection	5
4.3 Installation	5
5. Diaphragm and Center rod	
5.1 Removal	
■ BA□, BS□, BF□ types	6
■ BP□, BV□ types	6
5.2 Inspection	7
5.3 Installation	
■ B□C, B□N, B□E, B□V, B□H, B□S, B□H/T types	7
■ B□T types	8
6. Throat bearing and Pilot valve	
6.1 Removal	9
6.2 Inspection	9
6.3 Installation	9
7. C Spool valve assembly	
7.1 Removal	10
7.2 Inspection	11
7.3 Installation	11
8. Retightening of Tie rods	12

1. Principles of operation

There are two diaphragms fixed to the center rod, one at each end. When compressed air is supplied to air chamber b (right side, see Fig. 1.1), the center rod moves to the right, the material in material chamber B is pushed out, and at the same time material is sucked into material chamber A.

When the center rod is moved full-stroke to the right, the air switch valve is switched, compressed air is sent to air chamber a (left side, see Fig.1.2), and the center rod moves to the left. The material in material chamber A is pushed out, and at the same time material is sucked into material chamber B.

Through repetition of this operation, material is repeatedly taken in and discharged out.

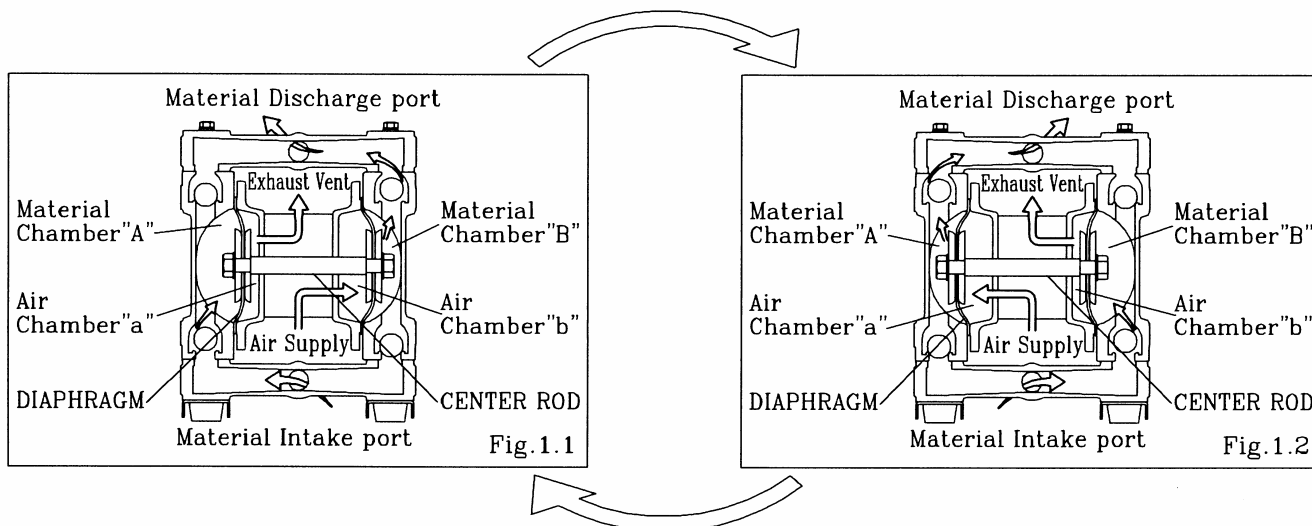

2. Tools, etc.



2.1 General tools

- | | |
|-------------------------|---|
| •Socket wrenches | 13mm, 17mm, 19mm (except with the NDP-40 BP□, BV□),
24mm (BA□, BS□, BF□) |
| •Hexagonal box wrenches | 5mm, 6mm |
| •Small crowbars | 2 (B□C, B□N, B□E, B□V) |
| •Open-end wrenches | 17mm (NDP-40 BP□, BV□), 19mm (BA□, BS□, BF□),
24mm (BA□, BS□, BF□) |
| •Plastic hammer | |

2.2 Special tools

- PP wrench (sold separately)
Purpose: Removing the center disk
of BP□ and BV□ types

- Sleeve remover (sold separately)
Purpose: For removing sleeve

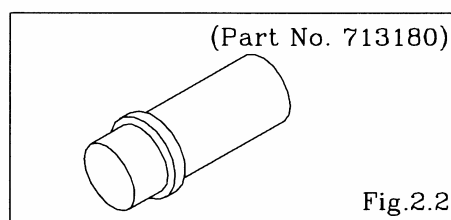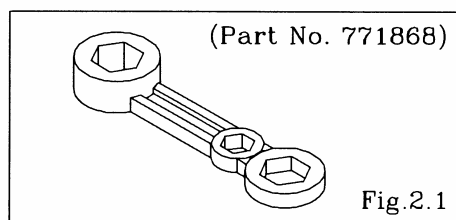

2.3 Misc.

- | | |
|----------------|--|
| •Assembly oil | Turbine oil none addition class 1 (equivalent to ISO VG32 grade) |
| •Nuts | M16 X 1.5 |
| •Thread locker | |
| •Grease | Urea grease grade (NLGI) No. 2 |


3. Ordering Replacement parts

For accurate and speedy shipment of parts, be sure to order the right parts for your model to distributor. Indicate the part numbers, descriptions, and quantities.


4. Balls and Valve seats

4.1 Removal


■BA□, BS□, BF□ types

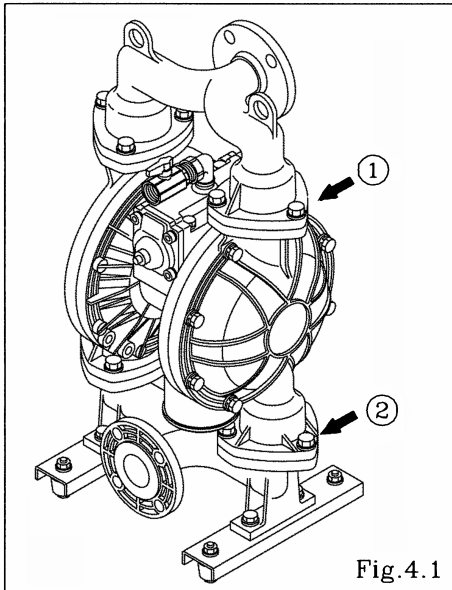

- Remove the 6 (8 on the NDP-80) retainer bolts "1" from the out manifold, and remove the out manifold. [Fig. 4.1]

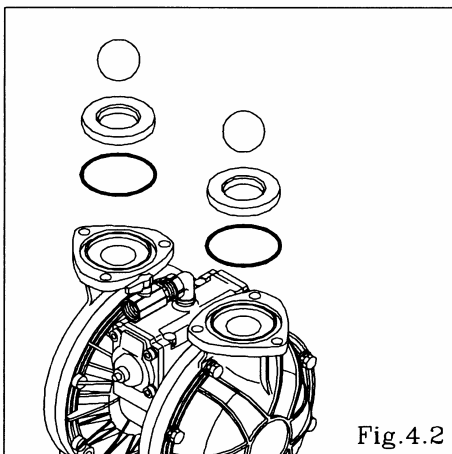


- Remove the ball, valve seat and O ring. [Fig. 4.2]

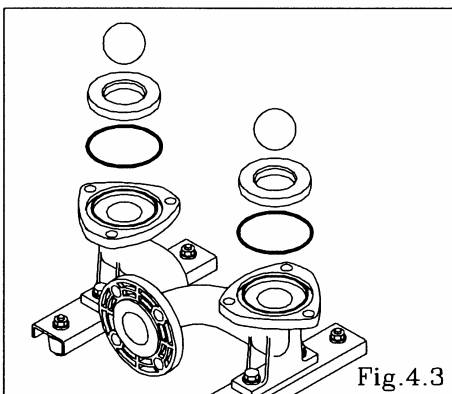


- Remove the 6 (8 on the NDP-80) retainer bolts "2" from the in manifold, and remove the in manifold. [Fig. 4.1]
- Remove the ball, valve seat and O ring. [Fig. 4.3]


■NDP-40 BP□·BV□ types

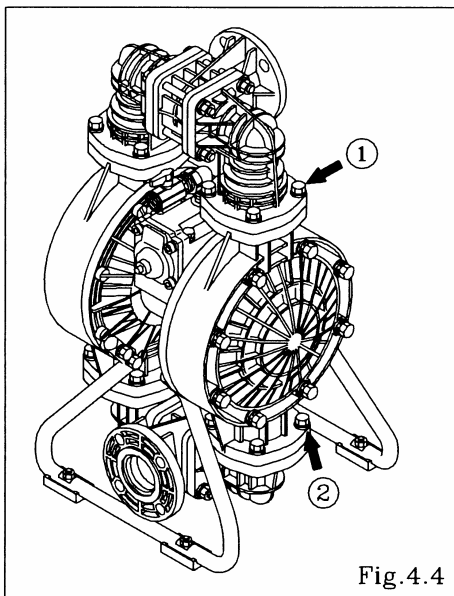

- Remove the 8 retainer bolts "1" from the out manifold, and remove the out manifold. [Fig.4.4]

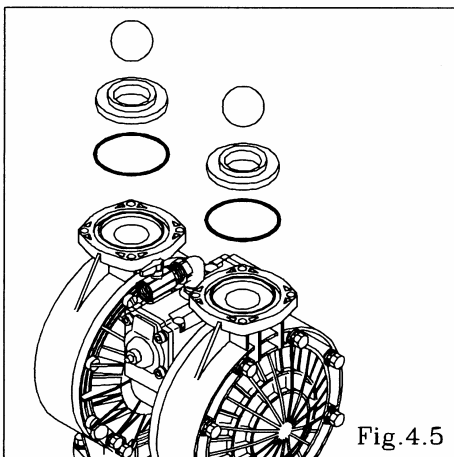


- Remove the ball, valve seat and O ring. [Fig.4.5]

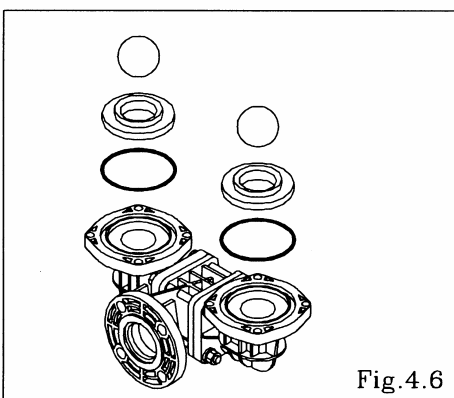


- Remove the 8 retainer bolts "2" from the in manifold, and remove the in manifold. [Fig.4.4]
- Remove the ball, valve seat and O ring. [Fig.4.6]


■ NDP-50 BP□·BV□, NDP-80 BP□ types

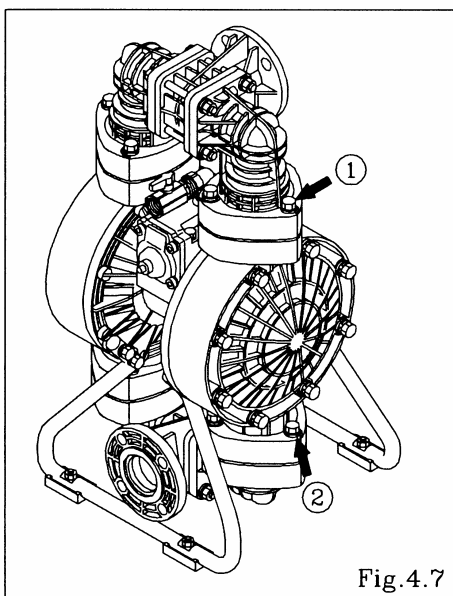

- Remove the 6 (8 on the NDP-80) retainer bolts "1" from the out manifold, and remove the protector and out manifold. [Fig.4.7]

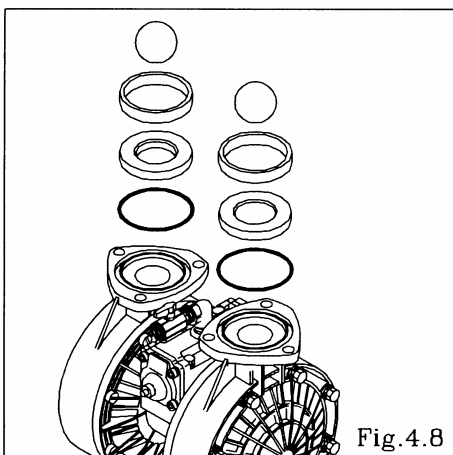


- Remove the ball, valve guide (only NDP-80), valve seat and O ring. [Fig.4.8]

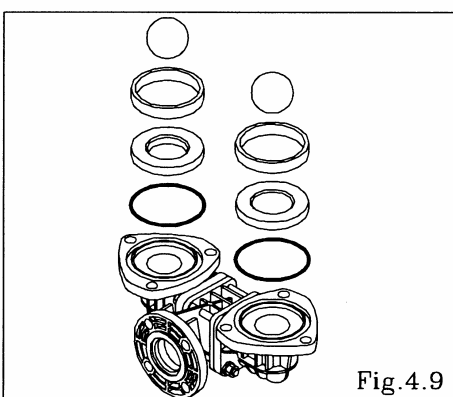

- Remove the 6 (8 on the NDP-80) retainer bolts "2" from the in manifold, and remove the protector and in manifold. [Fig.4.7]
- Remove the ball, valve guide (only NDP-80), valve seat and O ring. [Fig.4.9]

4.2 Inspection

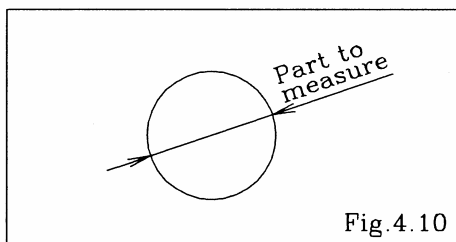


▪ Ball [Fig.4.10]

Measure the outside diameter, and if it is outside the usable range, replace the ball.

Usable range of ball

NDP-40	SØ 45.0 ~ SØ 51.5 mm
NDP-50	SØ 56.7 ~ SØ 64.9 mm
NDP-80	SØ 81.0 ~ SØ 92.7 mm

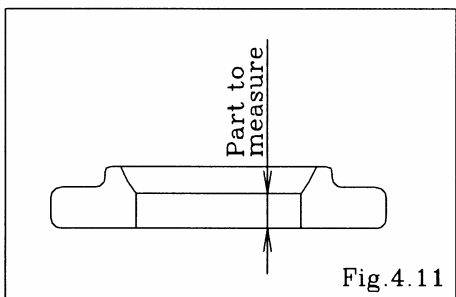

▪ Valve seat [Fig.4.11]

Measure the dimension shown at left, and if it is outside the usable range, replace the seat.

Usable range of valve seat

Usable range of valve seat		
<div></div>	B□C, B□N, B□E B□V, B□H, B□S, B□H/T	B□T
NDP-40	4.6 ~ 11.5 mm	1.7 ~ 4.1 mm
NDP-50	5.0 ~ 12.5 mm	
NDP-80		

▪ O ring (other than PTFE)

If O ring is worn out or cracked, replace it.


4.3 Installation

For installation, see [Exploded View] on the separate sheet and install in the reverse order of disassembly.

Tightening torque for manifold retainer bolts

20 N·m

NDP-50	BP□, BV□	25 N·m
NDP-80	BP□	

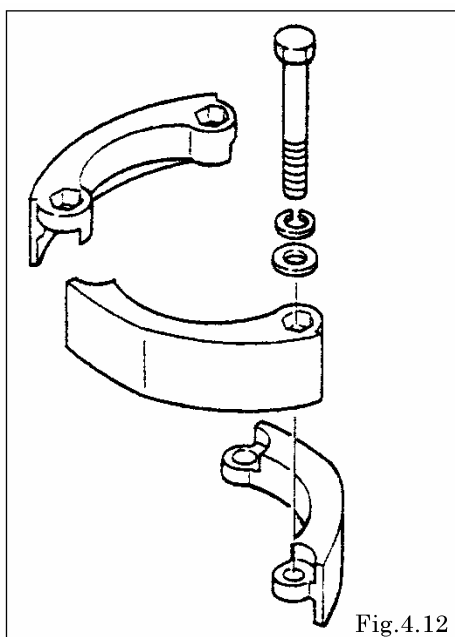

<NOTE>


- Make sure there is no dust on the seal surface and the seal is not damaged.
- Replace the PTFE O ring regardless of its condition.
- Match the convex and concave parts of the protector.

[Fig.4.12] (NDP-50 BP□·BV□, NDP-80 BP□)


5. Diaphragm and Center rod

5.1 Removal


■BA□, BS□, BF□ types

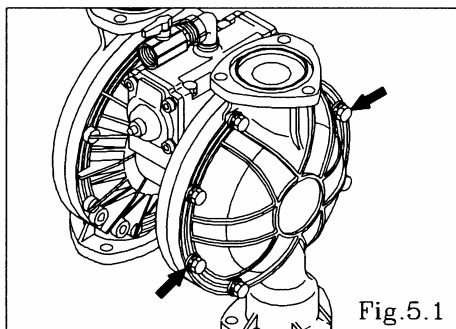

- Remove the ball and valve seat etc. (see [4.1 Removal BA□, BS□, BF□ types])
- Remove the 16 (24 on the NDP-80) retainer bolts from the out chamber, and remove the out chamber. [Fig.5.1]

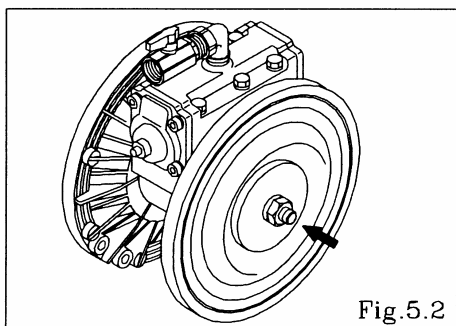


- Remove the nuts on both sides of the center rod. [Fig.5.2]
- After the nut on one side have been removed, remove the center disk and diaphragm. Remove the diaphragm, center disk and center rod from the opposite side of the main body.

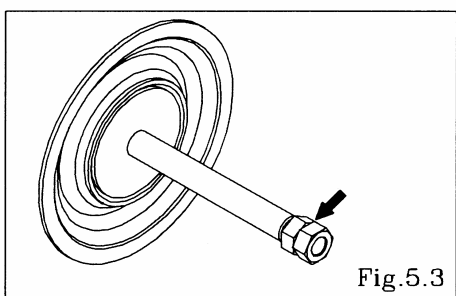


- Remove the nut on the opposite side using the double nut. [Fig.5.3]
- Remove the coned disk spring, center disk and diaphragm.

■BP□, BV □types

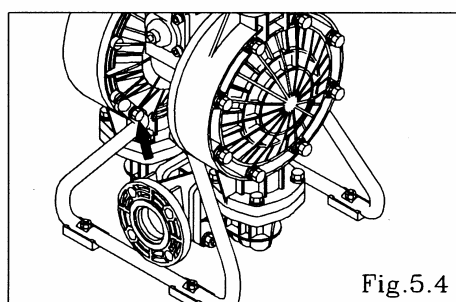

- Remove the ball etc.(see [4.1 Removal BP□, BV□ types])
- Remove the 8 (4 on the NDP-40) retainer bolts from the stand body, and remove the stand body. [Fig.5.4]

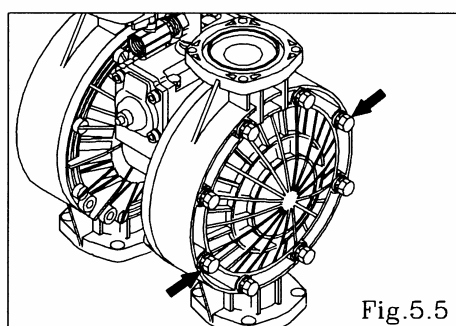

- Remove the 16 (24 on the NDP-80) retainer bolts from the out chamber, and remove the out chamber. [Fig.5.5]

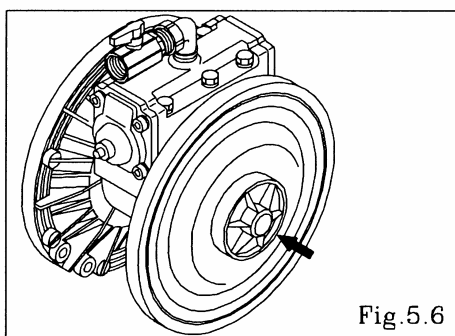


Fig.5.6

- Remove the center disk from one side using the PP wrench (special tool: Part No. 771868). [Fig.5.6]
- After the center disk (outside) has been removed, remove the diaphragm and the center disk (inside). Remove the center disk and center rod from the opposite side of the main body.

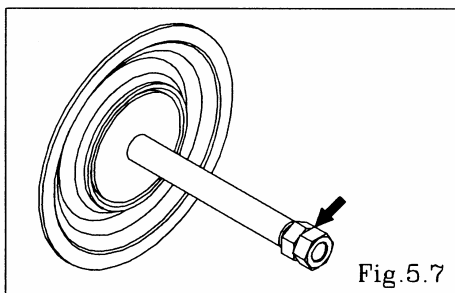


Fig.5.7

- Fix a double nut to one end of the center rod and take the diaphragm and center disk off the opposite end. [Fig.5.7]
- Be careful not to scratch or score the center rod.

5.2 Inspection

- Diaphragm

If the diaphragm is worn out or damaged, replace it.

New replace just one diaphragm.

Guideline of diaphragm life

CR, NBR, EPDM	10,000,000 cycle
FKM	2,500,000 cycle
PTFE	3,000,000 cycle
TPEE, TPO	15,000,000 cycle

(When used with clean water at room temperature)

- Center rod [Fig.5.8]

Measure the diameter, and if it is outside the usable range, replace the rod.

Usable range of center rod

$\varnothing 24.93 \sim \varnothing 25.00 \text{ mm}$

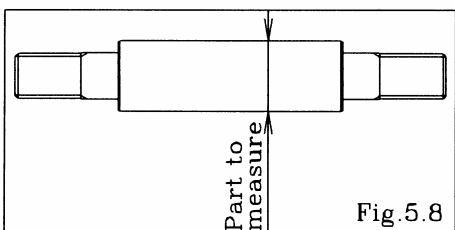


Fig.5.8

5.3 Installation

■ B□C, B□N, B□E, B□V, B□H, B□S, B□H/T types

For installation, see [Exploded View] on the separate sheet and install in the reverse order of disassembly.

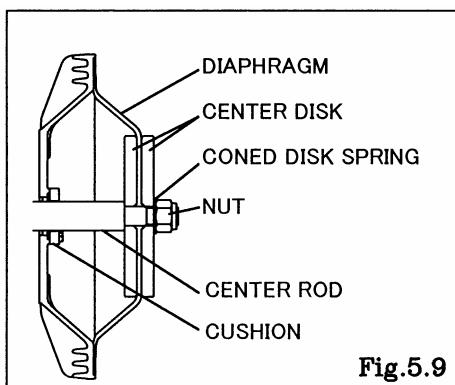


Fig.5.9

- Apply assembly grease to center rod, and insert it into the main body.
- Insert the cushion (except with the NDP-80). (cf. Fig.5.9)
- Keep the marking "OUTSIDE" to liquid end for CR, NBR, EPDM, FKM diaphragms. Keep the convex side to the outside for TPEE, TPO diaphragms.
- Tighten the center disk using the PP wrench(special tool: Part No.771868) for the BP□, BV□ types. Apply proper Thread locker to the thread of center disk. (No coned disk springs and nuts are needed.)

Tightening torque for center rod

BA□, BS□, BF□	60 N·m
BP□, BV□	50 N·m

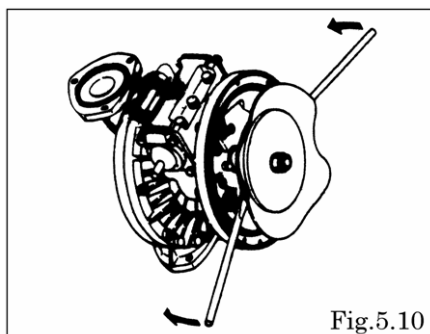


Fig.5.10

- Draw the center disk to one side (exclude B□H, B□S, B□H/T type cf. Fig.5.9).
- And install the out chamber. Tighten the bolts temporarily.
- Grip the inside center disk using crowbars and draw it to the opposite side, then turn the diaphragm over. (exclude B□H, B□S, B□H/T type) [Fig.5.10, 5.11]
- And install the out chamber. Tighten the bolts temporarily.
- After installation of the out chambers on both sides, place the pump on a flat surface and stand the pump upright for further assembly.

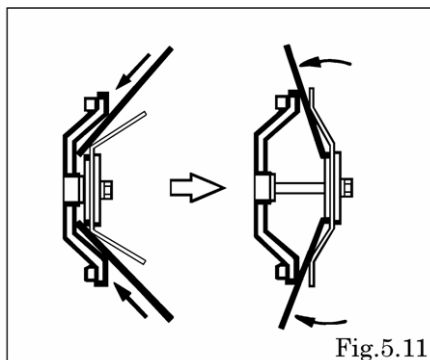


Fig.5.11

Tightening torque for out chamber.

BA□, BS□, BF□	40 N·m
BP□, BV□	35 N·m

<NOTE>

- Make sure there is no dust on the seal surface in order to prevent seal damaged.
- Be careful not to damage the R portion of the air chamber using a crowbar, etc.
- Tighten the bolts gradually in a diagonal sequence with even torque. [Fig.5.12].

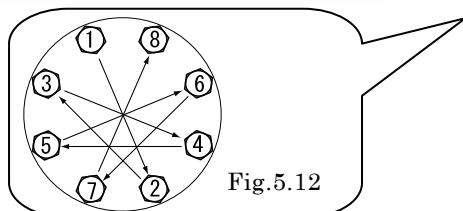


Fig.5.12

■B□T type

For installation, see [Exploded View] on the separate sheet and install in the reverse order of disassembly.

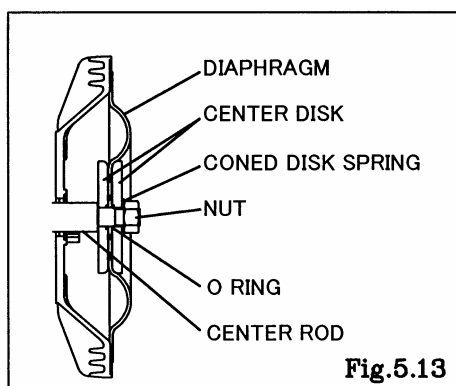


Fig.5.13

- Apply assembly grease to center rod, and insert it into the main body.
- Keep the convex side to the outside (cf. Fig.5.13).
- Put the O rings to both sides of the diaphragm. (cf. Fig.5.13)
- Tighten the center disk using the PP wrench(special tool: Part No. 771868) for the BPT, BVT type. Apply proper Thread locker to the thread of center disk. (No coned disk springs and nuts are needed.)

Tightening torque for center rod

BAT, BST, BFT	60 N·m
BPT, BVT	50 N·m

- Tighten the out chamber temporarily at first. After installation of the out chambers on both sides, place the pump on a flat surface and stand the pump upright for further assembly.

Tightening torque for out chamber

BAT, BST, BFT	40 N·m
BPT, BVT	35 N·m

<NOTE>

- Make sure there is no dust on the seal surface in order to prevent seal damaged.
- Replace the PTFE O ring by new one.
- Tighten the bolts gradually in a diagonal sequence with even torque. [Fig.5.14].

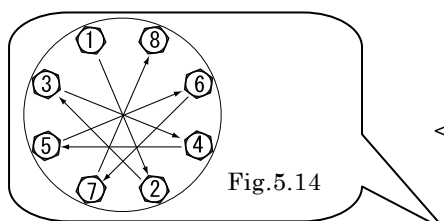


Fig.5.14

6. Throat bearing and Pilot valve assembly

6.1 Removal

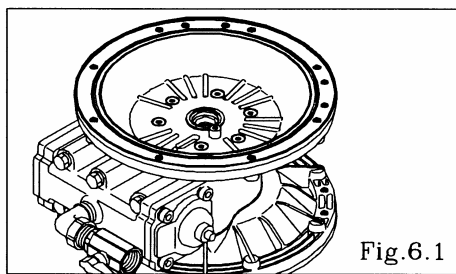


Fig.6.1

- Remove the diaphragm and center rod (see [5.1 Removal]).
- Remove the 12 retainer bolts from the air chamber, and remove the air chamber. [Fig.6.1]

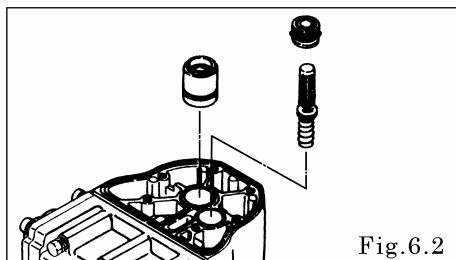


Fig.6.2

- Draw out the pilot valve and valve seat. [Fig.6.2]
- Draw out the throat bearing. [Fig.6.2]

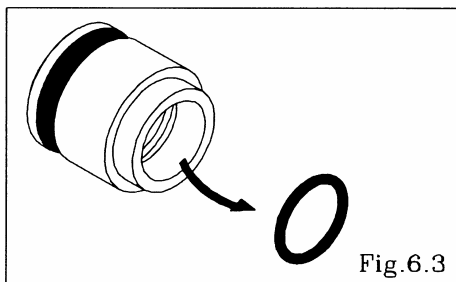


Fig.6.3

- Remove the packing from the throat bearing. [Fig.6.3]

6.2 Inspection

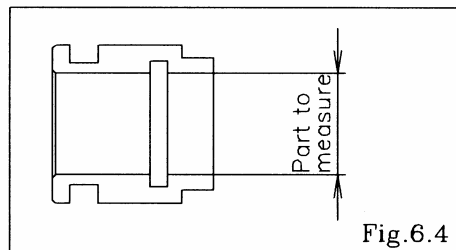


Fig.6.4

- Throat bearing [Fig.6.4]
Measure the inside diameter, and if it is outside the usable range, replace the throat bearing

Usable range of throat bearing

Ø 25.04~ Ø 25.13mm

- O ring, Packing
If the O ring is worn out or cracked, replace it.
- Pilot valve
If the pilot valve is worn out or cracked, replace it.

6.3 Installation

For installation, see [Exploded View] on the separate sheet and install in the reverse order of disassembly.

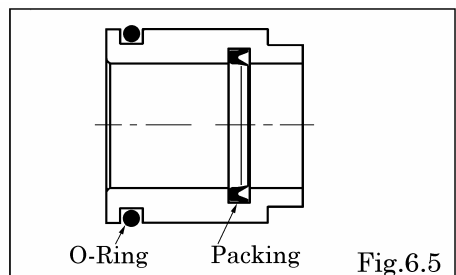


Fig.6.5

Tightening torque for air chamber retainer bolts


20 N·m

<NOTE>


- Make sure there is no dust on the seal surface and the seal is not damaged.
- Apply grease to packing.

7. C spool valve assembly


7.1 Removal

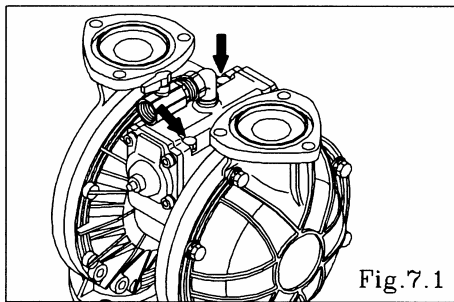


- Remove the out manifold (see [4.1 Removal]).
- Remove the 6 retainer bolts from the valve body, and remove the valve body. [Fig.7.1]

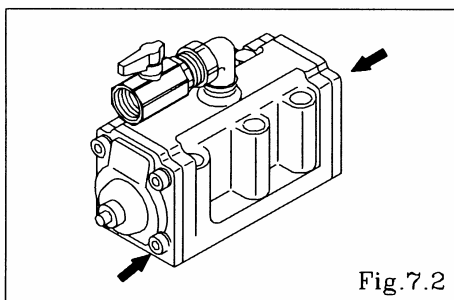

- Remove the 8 cap A and cap B retainer bolts, and remove cap A and cap B. [Fig.7.2]

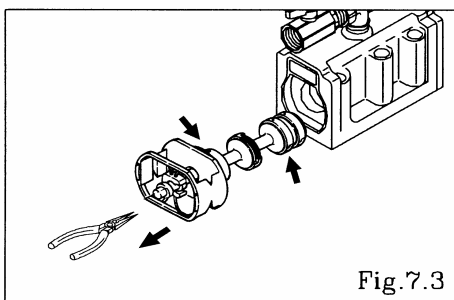

- Draw out the C spool valve assembly, and remove the seal ring from the C spool valve assembly.
- Remove the spring stopper. [Fig.7.3]

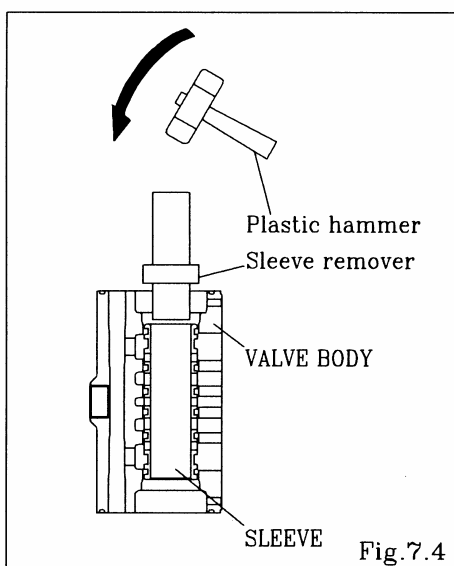

- Remove the sleeve using the sleeve remover (special tool: Part number 713180). [Fig.7.4]

7.2 Inspection

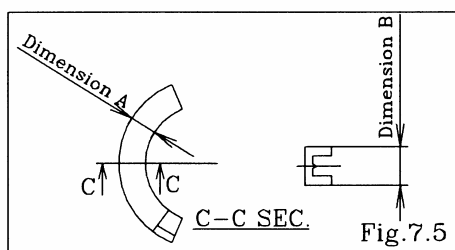


Fig.7.5

▪ C Spool Valve Assembly

Seal ring [Fig.7.5]

Measure dimensions A and B, and if there is sufficient wear to require replacement, replace the c spool valve assembly.

If the seal ring is worn out or cracked, replace c spool valve assembly.

Usable range of seal ring

Dimension A	More than 5.05 mm
Dimension B	More than 7.30 mm

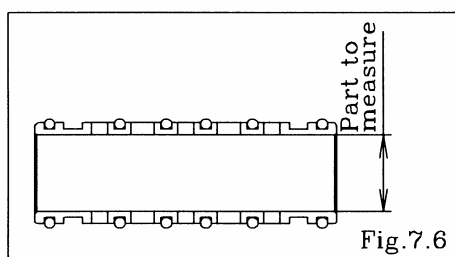


Fig.7.6

▪ Sleeve Assembly[Fig.7.6]

Measure the inside diameter, and if it is outside the usable range, replace the c spool valve assembly.

Usable range of sleeve

$\varnothing 33.15 \sim \varnothing 33.35 \text{ mm}$

▪ O ring

If the O ring is worn out or cracked, replace it.

<NOTE>

- C Spool Valve Assembly must be replaced as a complete set. Unable to replace individual component.

7.3 Installation

For installation, see [Exploded View] on the separate sheet and install in the reverse order of disassembly.

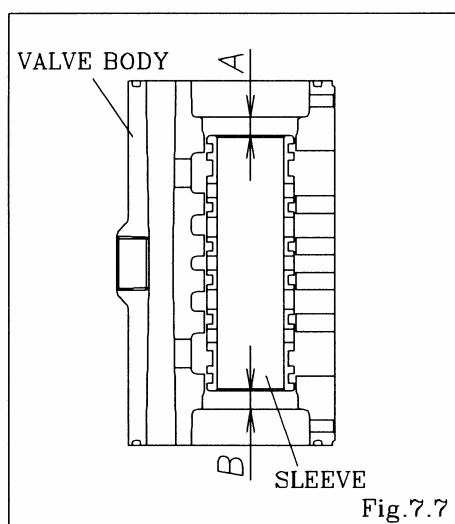


Fig.7.7

- Install the sleeve using the sleeve remover (special tool: Part No. 713180). At this point, apply assembly oil around the sleeve and O ring.
- Install the sleeve at the center of the valve body. (A = B)

Tightening torque for installation cap A, cap B

10 N·m

Tightening torque for valve body installation bolts


17 N·m

<NOTE>

- Make sure there is no dust on the seal surface and it is not damaged.

8. Retightening of Tie rods

■ Plastic type

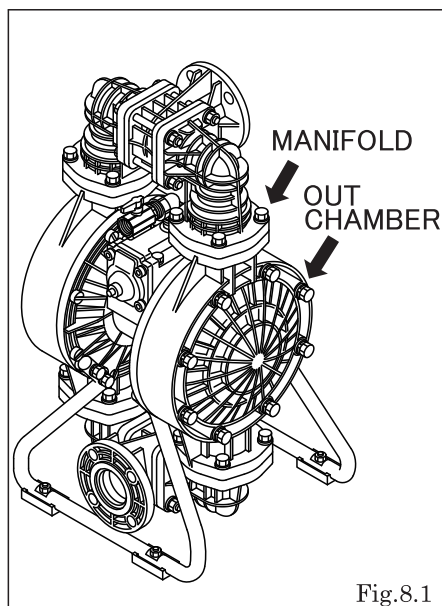


- All bolts should be retorqued:
 - (1) Right before start up.
 - (2) There are any leaks of material on daily inspecting a pump.


		Retain bolts for the out chamber.	Retain bolts for the manifold.
NDP-40 NDP-50 NDP-80	BP□	35 N·m	20 N·m
NDP-40 NDP-50	BV□		

<NOTE>

- Retighten the Out chamber and then the manifold in this order. [Fig.8.1]
- Tighten the bolts in the order shown. [Fig.8.2]

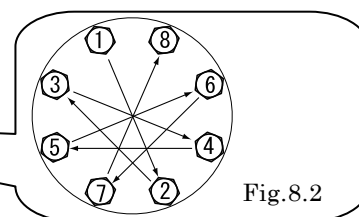

■ Metal type

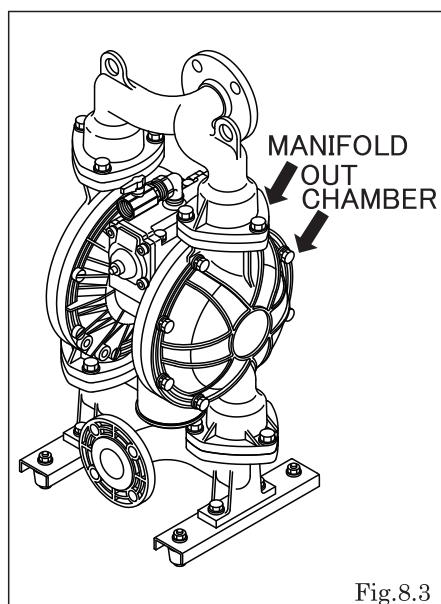


- All bolts should be retorqued:
 - (1) Right before start up.
 - (2) There are any leaks of material on daily inspecting a pump.

		Retain bolts for the out chamber.	Retain bolts for the manifold.
NDP-40 NDP-50 NDP-80	B□C, B□N B□E, B□V B□T, B□H B□S, B□H/T	40 N·m	20 N·m

<NOTE>

- Retighten the Out chamber and then the manifold in this order. [Fig.8.3]
- Tighten the bolts in the order shown. [Fig.8.4]

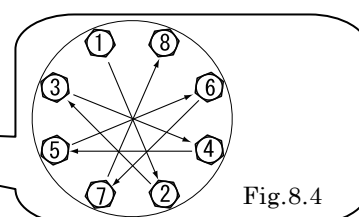

Manufactured by

YAMADA CORPORATION
INTERNATIONAL DEPARTMENT

No.1-3, 1-Chome, Minami-Magome, Ohta-Ku, Tokyo 143-8504 Japan

PHONE : +81-(0)3-3777-0241

FAX : +81-(0)3-3777-0584

YAMADA EUROPE B.V.

Aquamarijnstraat 50, 7554 NS Hengelo (O), The Netherlands

PHONE : +31-(0)74-242-2032

FAX : +31-(0)74-242-1055